


Do not stake unless in heavy clay soil, windy conditions, 3" or greater diameter tree trunk or large crown. If staking is needed due to these conditions:

- Stake with 2 X 2 hardwood stakes or approved equal driven 6"-8" outside of rootball.
- Loosely stake tree trunk to allow for trunk flexing.
- Stake trees just below first branch with 2"-3" wide belt-like, nylon or plastic straps (2 per tree on opposite sides of tree, connect from tree to stake horizontally. Do not use rope or wire through a hose.)
- Remove all staking materials after 1 year.

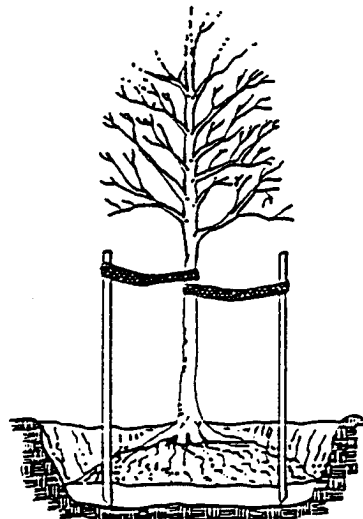

TREE PLANTING DETAIL

Scale: No scale

Modified from Dr. Bonnie Appleton, Virginia Polytechnic Institute and State University
 Courtesy of Michigan Department of Natural Resources, Forest Management Division



IC-108, (6/94)